


Bosch 0231.129.031 Ignition Distributor Advance Curve

Dist RPM	Low Side Adv	High Side Adv	Actual Adv
0	-1	1	0
300	-1	1	0
500	-1	4	0
750	4	8	5
1000	7	11	8
1250	10	14	11
1500	11	16	12
1750	12	16.5	13
2000	13	16.5	14
2250	13.5	16.5	15
2500	13.5	16.5	16
2750	13.5	16.5	16
3000	13.5	16.5	16
3250	13.5	16.5	16
3500	13.5	16.5	16
3750	13.5	16.5	16
4000	13.5	16.5	16

Note Rpm and Advance Degrees are in Distributor Advance to get engine Advance Double the values

Dwell °
49°

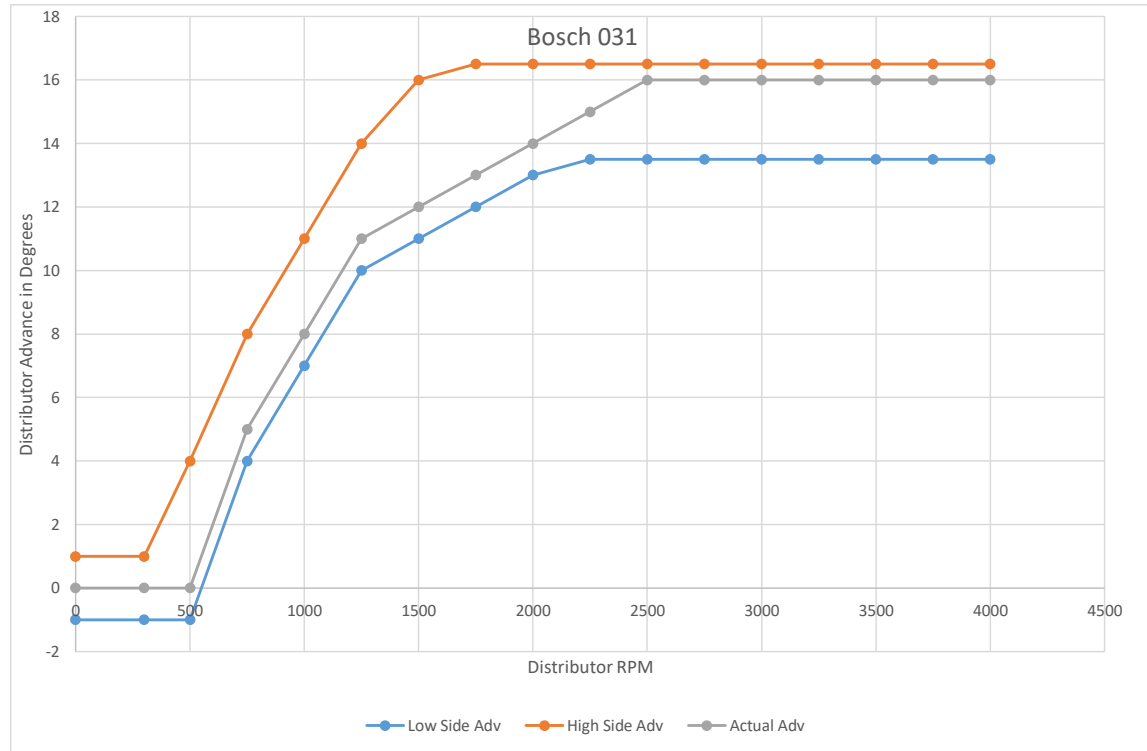

Klassik Automotive Training School, Flagstaff, AZ 86001 contact@klassikats.com 928-910-4423