


Bosch 0231.159.008 Ignition Distributor Advance Curve

| Dist RPM | Low Side Adv | High Side Adv | Actual Adv |
|----------|--------------|---------------|------------|
| 0 | -1 | 1 | 0 |
| 250 | -1 | 1 | 0 |
| 500 | -1 | 1 | 0 |
| 750 | -1 | 6 | 3 |
| 1000 | 7 | 12 | 8 |
| 1250 | 9 | 13 | 11 |
| 1500 | 10 | 14 | 12 |
| 1750 | 11 | 15 | 13 |
| 2000 | 12 | 16 | 14 |
| 2250 | 13 | 17 | 15 |
| 2500 | 14 | 18 | 16 |
| 2750 | 15 | 19 | 17 |
| 3000 | 16 | 20 | 18 |
| 3250 | 17 | 21 | 18 |
| 3500 | 17 | 21 | 18 |
| 3750 | 17 | 21 | 18 |
| 4000 | 17 | 21 | 18 |

Note Rpm and Advance Degrees are in Distributor Advance to get engine Advance Double the values

Dwell °
N/A Pertronix

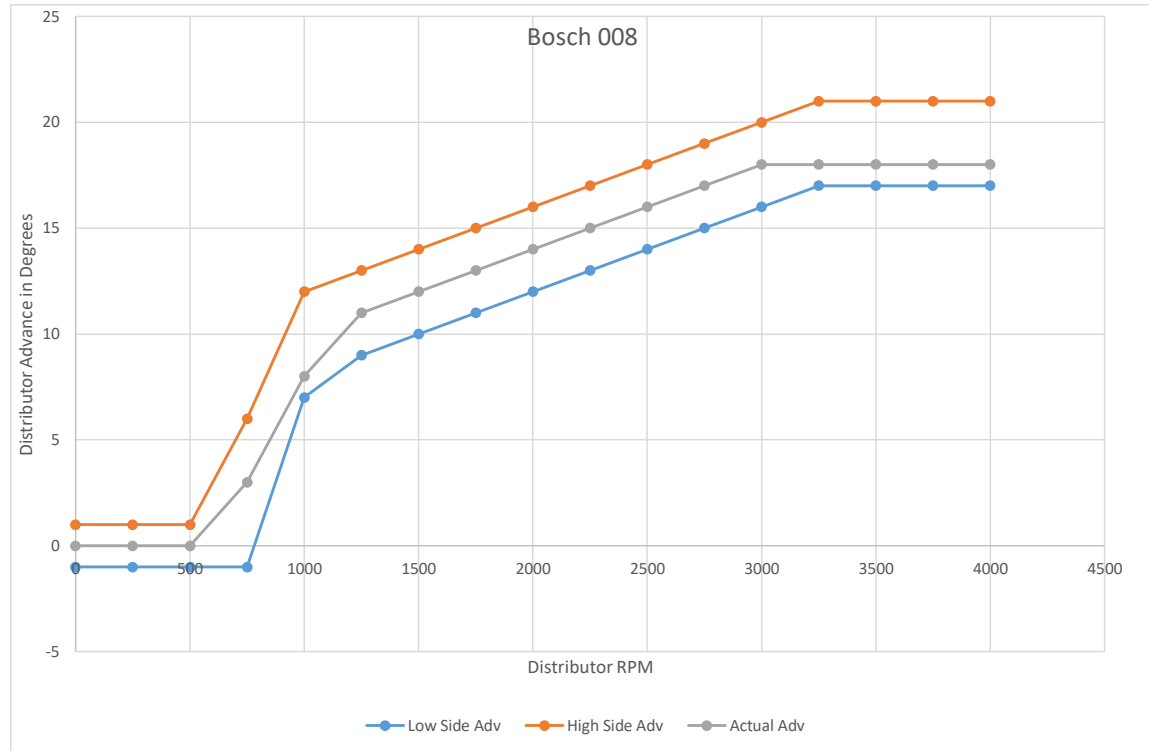

Klassik Automotive Training School, Flagstaff, AZ 86001 contact@klassikats.com 928-910-4423