


## Bosch VE383 Ignition Distributor Advance Curve

Dist RPM	Low Side Adv	High Side Adv	Actual Adv
0	-1	1	0
300	-1	1	0
500	-1	4	0
750	1	7	2
1000	5	10	6
1250	9	13	11
1500	12	15.5	15
1750	13.5	16.5	16
2000	13.5	16.5	16
2250	13.5	16.5	16
2500	13.5	16.5	16
2750	13.5	16.5	16
3000	13.5	16.5	16
3250	13.5	16.5	16
3500	13.5	16.5	16
3750	13.5	16.5	16
4000	13.5	16.5	16

Note Rpm and Advance Degrees are in Distributor Advance to get engine Advance Double the values

Dwell °  
50

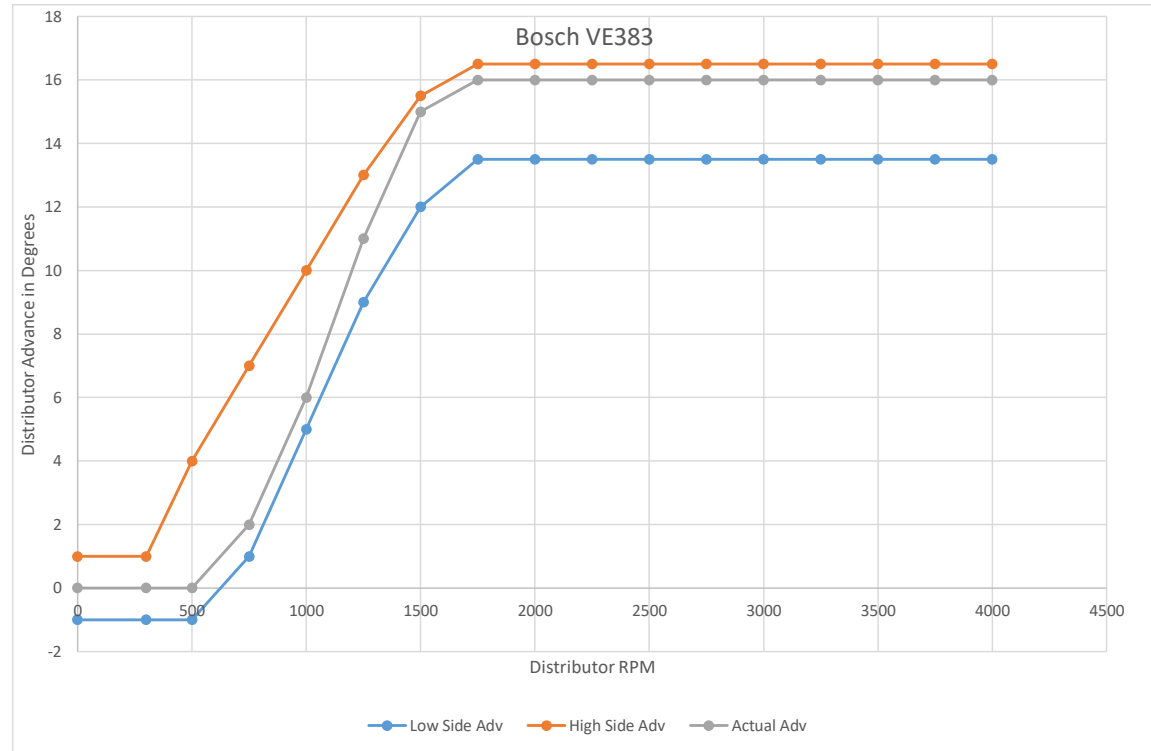

Klassik Automotive Training School, Flagstaff, AZ 86001 [contact@klassikats.com](mailto:contact@klassikats.com) 928-910-4423