


Bosch 0237.301.009 Advance Curve

Dist RPM	Low Side Advvar	High Side Advvar	Actual Advance
0	-1	1	0
250	-1	1	0
600	-1	1	0
700	-1	2	1
1000	4	6	5
1250	6	9	7
1500	7	10	8
1750	8	11	9
2000	9	12	10
2250	10	12.75	11
2500	10.25	12.5	11
2750	10	12.25	10.5
3000	9.9	12	10.4
3250	9.8	11.9	10.3
3500	9.7	11.6	10.2
3750	9.6	11.5	10.1
4000	9.5	11.4	10

Note Rpm and Advance Degrees are in Distributor Advance to get engine Advance Double the values

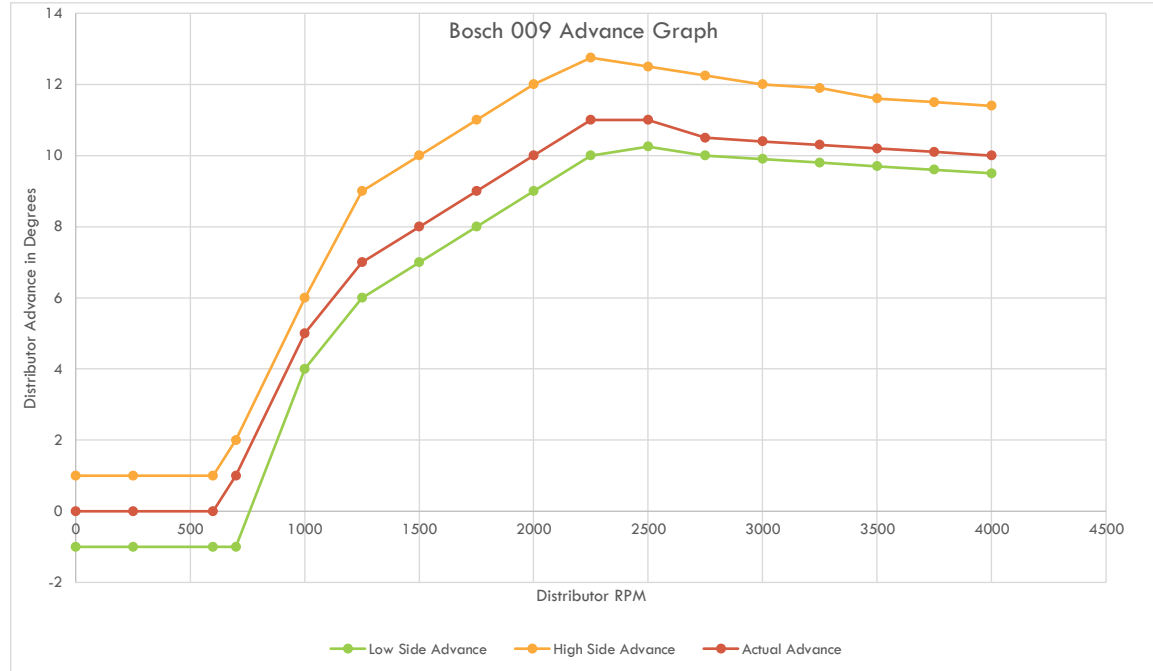

Vacuum Advance Operation

mBar Vacuum	Advance In Distributor Degrees
25	0
50	0
75	1
100	2
125	3
150	3
175	3
200	3
225	3
250	3
275	3
300	3

