


Bosch 0237.302.034 Advance Curve

Dist RPM	Low Side Advvar	High Side Advvar	Actual Advance
0	-1	1	0
250	-1	1	0
600	-1	1	0
750	-1	2	0.5
1000	1	3	2
1250	2.5	4	3
1500	3.5	5	4
1750	4.5	6.2	5
2000	5.25	6.1	5.75
2250	5	6	5.5
2500	4.9	5.9	5.4
2750	4.8	5.8	5.3
3000	4.7	5.7	5.2
3250	4.6	5.6	5.1
3500	4.5	5.5	5
3750	4.4	5.4	4.9
4000	4.3	5.3	4.8

Note Rpm and Advance Degrees are in Distributor Advance to get engine Advance Double the values

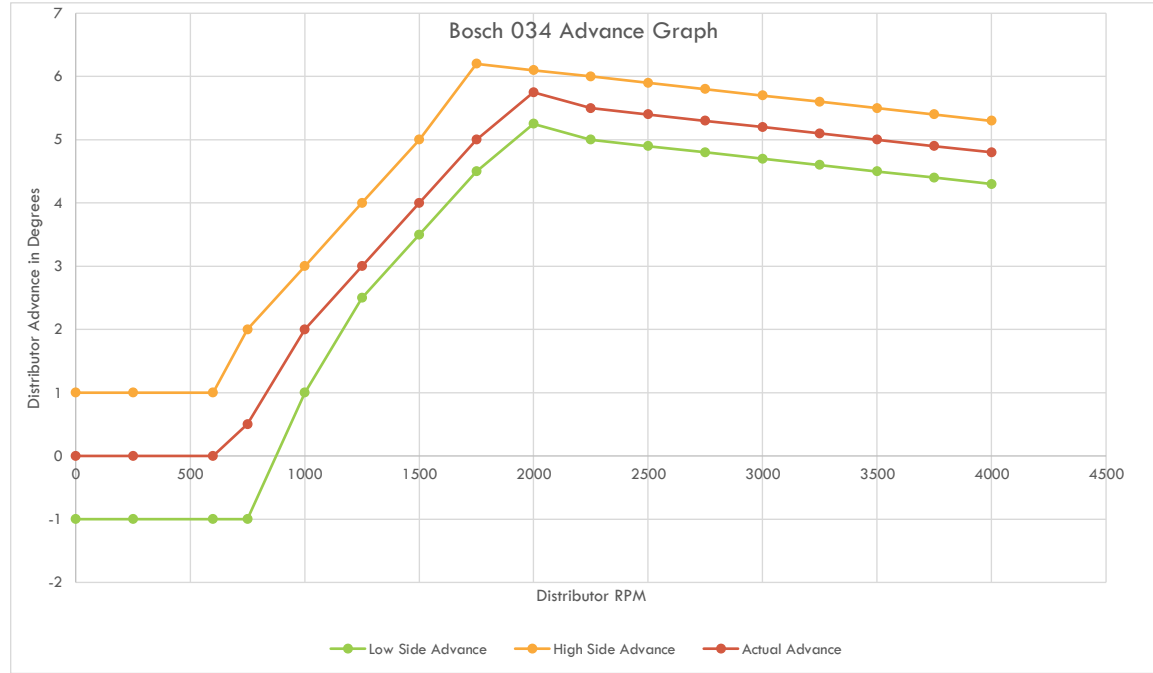

Vacuum Advance Operation

mBar Vacuum	Advance In Distributor Degrees	Retard In Distributor Degrees
25	0	0
50	0	0
75	0	0
100	1	-1
125	1.5	-1.25
150	2	-2
175	3	-2.75
200	4	-3.5
225	4	-3.5
250	4	-3.5
275	4	-3.5
300	4	-3.5

